

NEVE

**NEVE RUBINETTERIE
VIA NOVARA 18
28024 GOZZANO (No)
ITALY**

**e-mail :
tecnico@neve-rubinetterie.com**


**visitaci / visit us
www.neve-rubinetterie.com**

NEVE


ISTRUZIONI DI MONTAGGIO
FITTING INSTRUCTIONS

BOXER - BOY
LINO - MONO


A

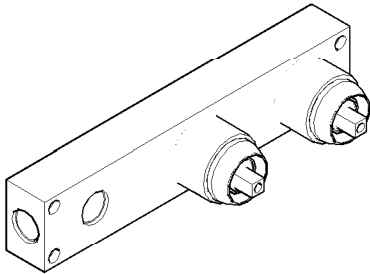

B

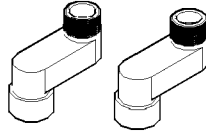


C




D




1

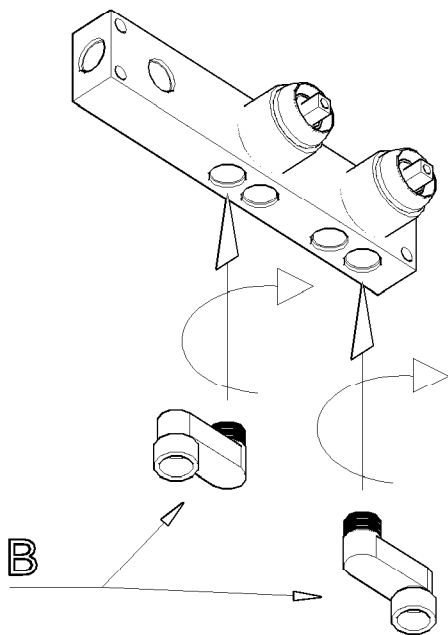


2

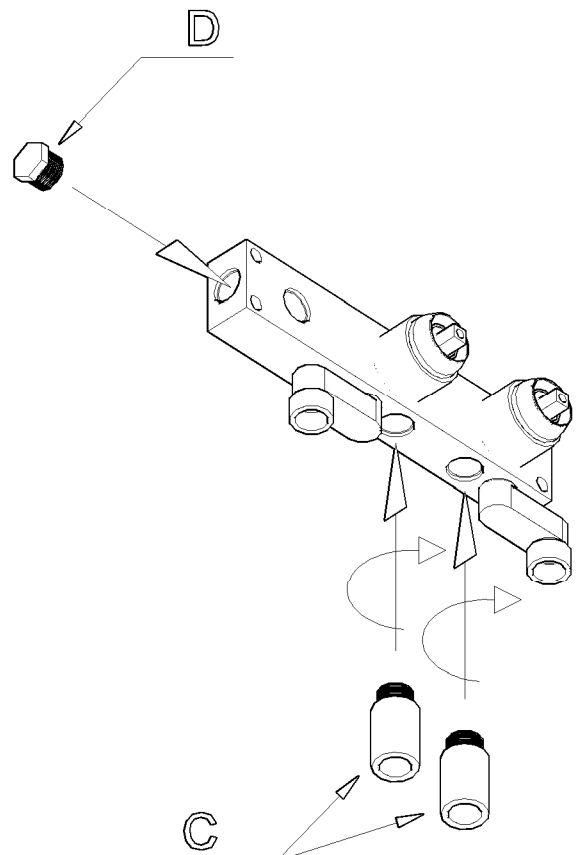




9

BOXER

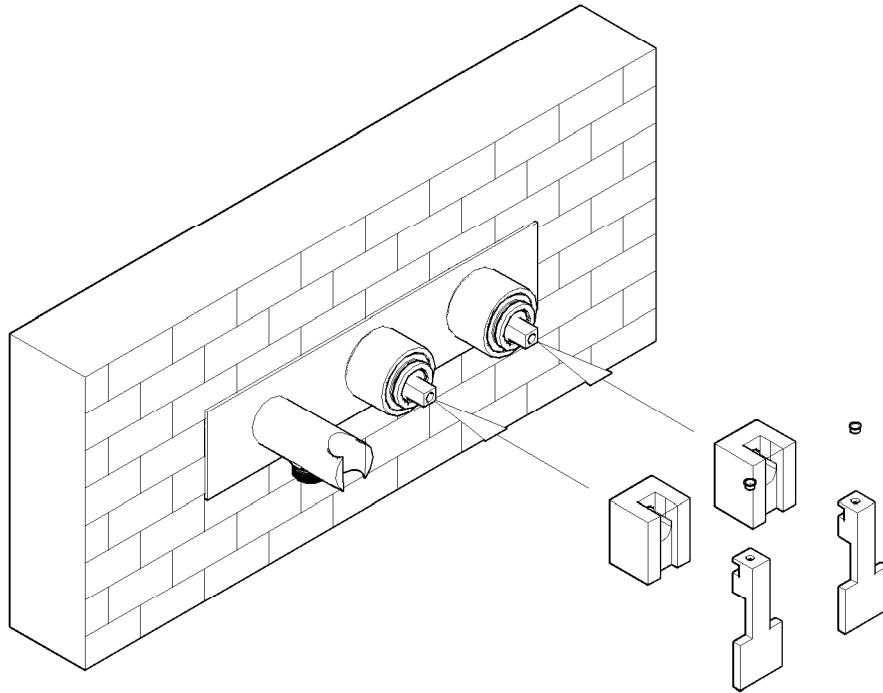


10

BOY

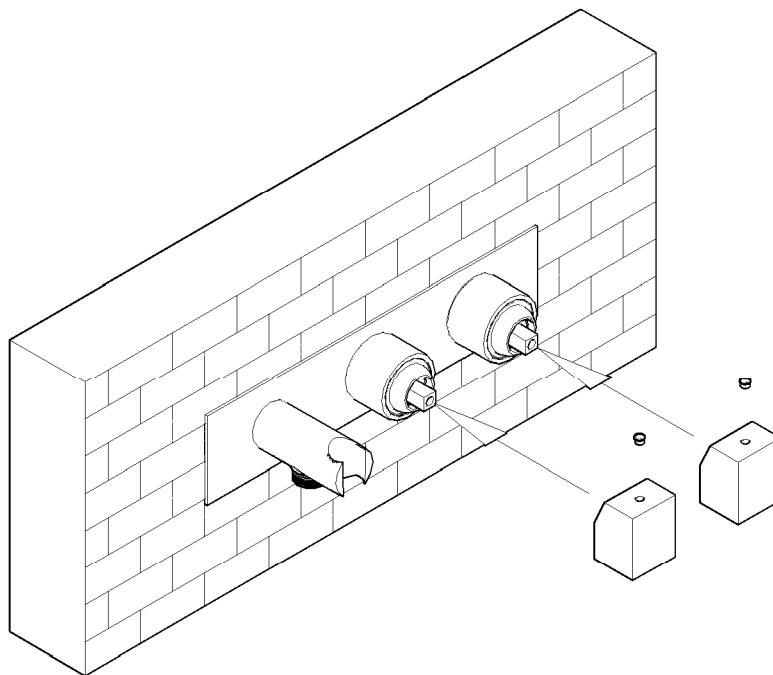


3

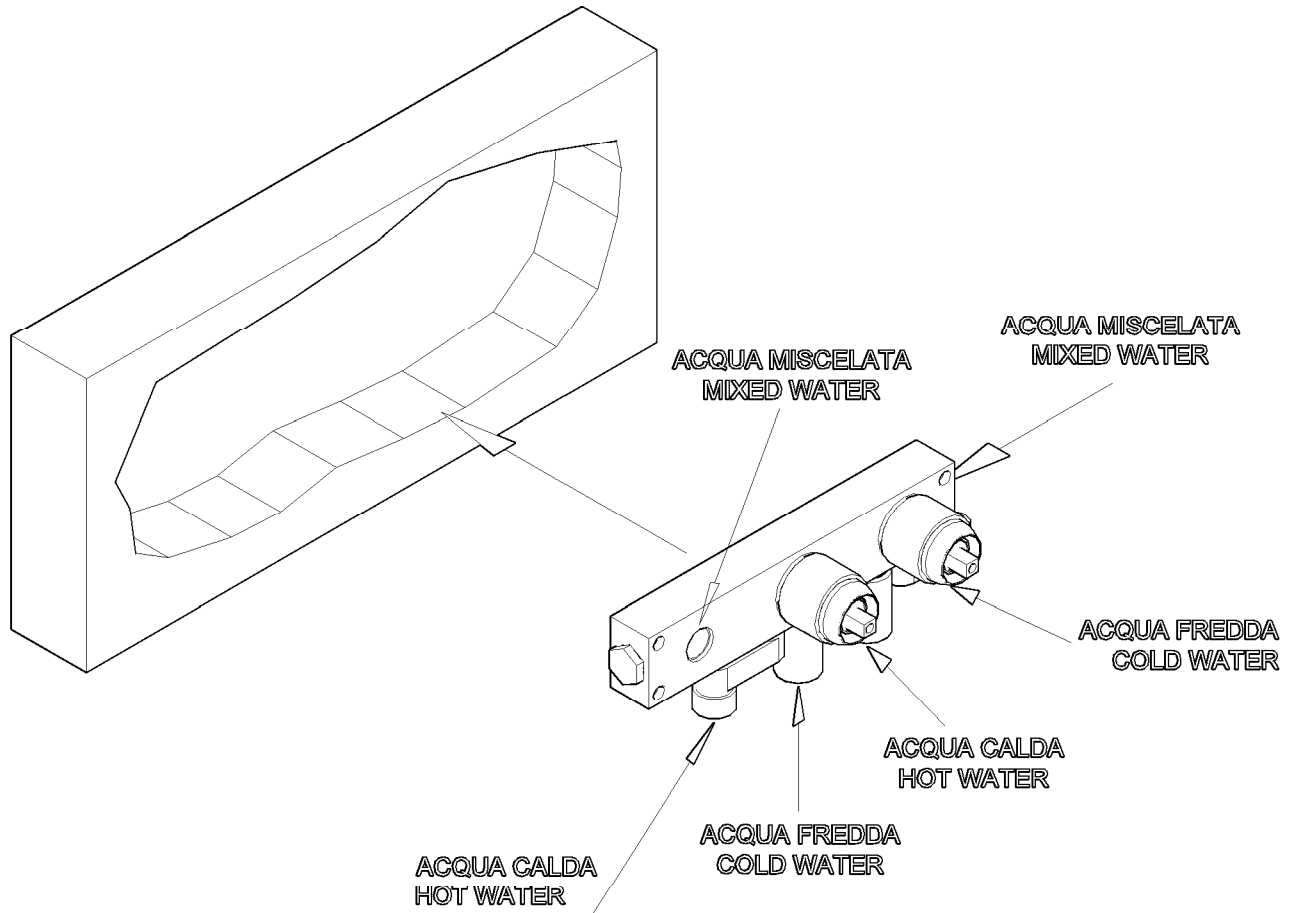


4


Min. 30 mm

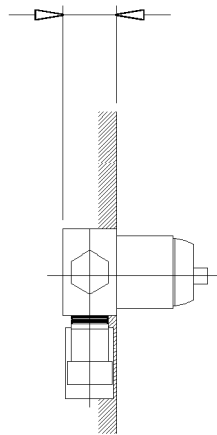


Max. 49.5 mm

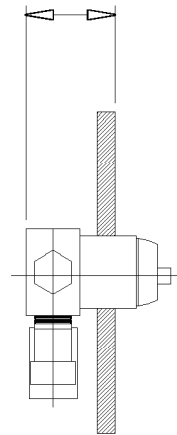

5

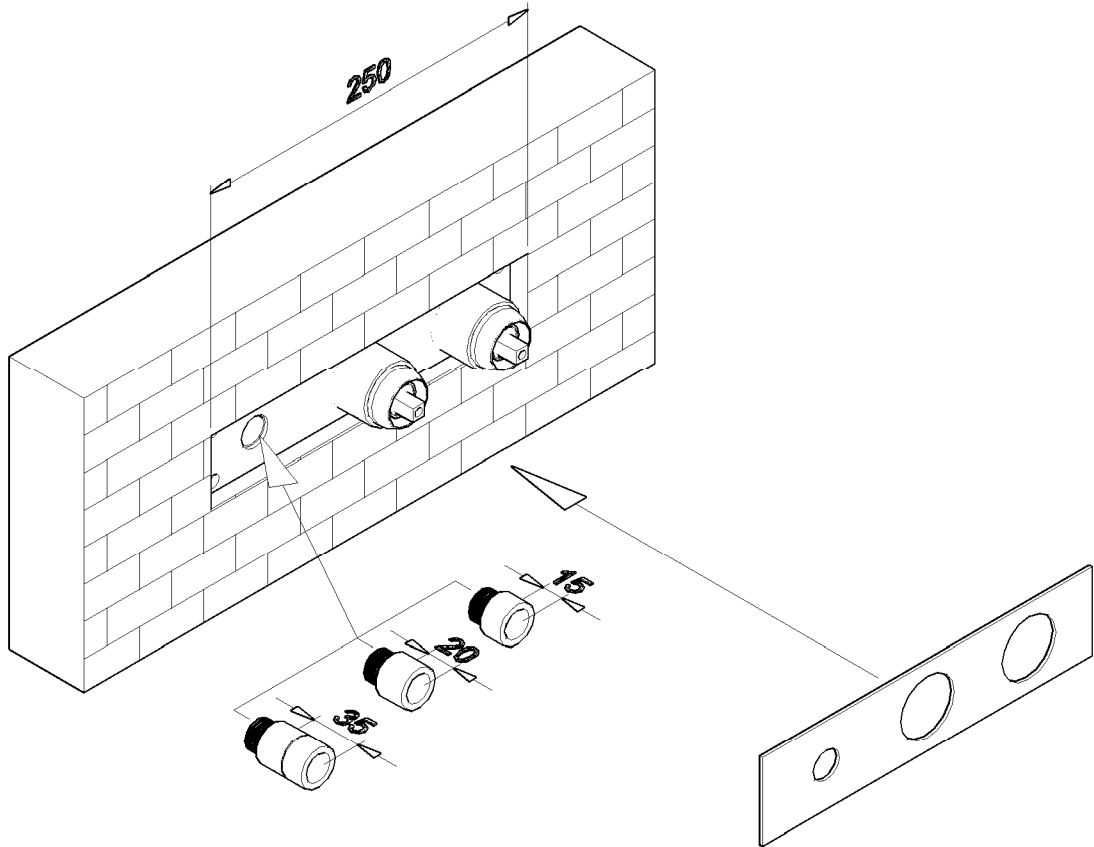


6

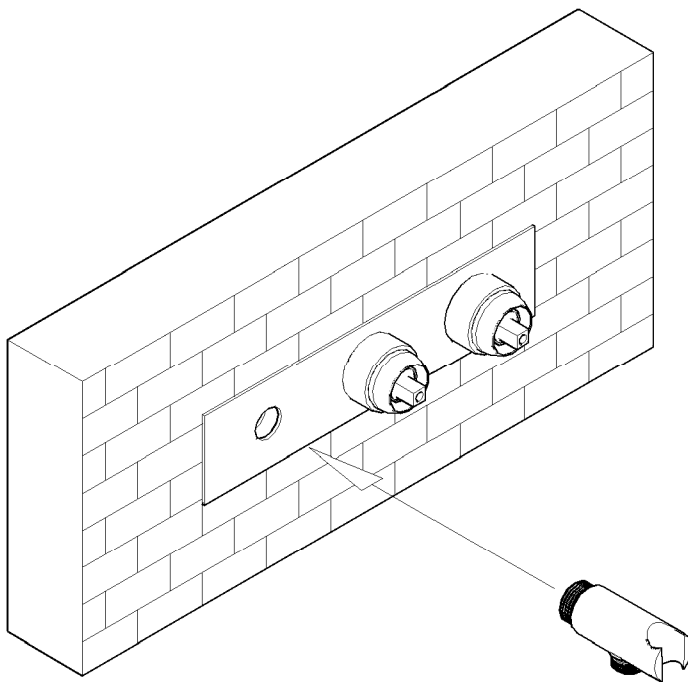

7

LINO

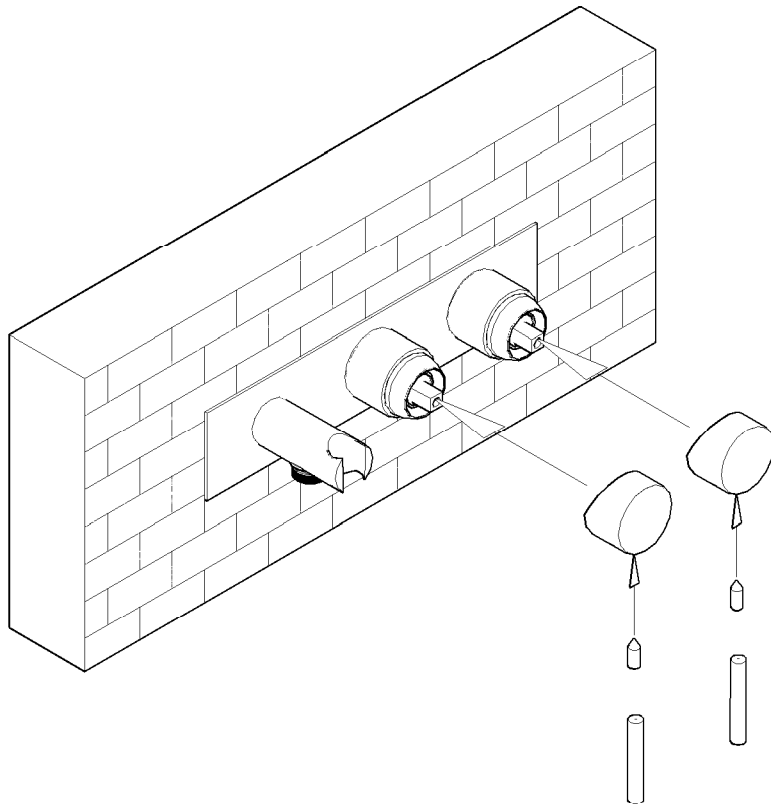

8

MONO

